

New Keypad Cabinet Lock User's Manual 2020

Valid passwords are 4 - 10 digits. The total length of the password can be up to 15 digits (if the 16th digit is entered, the lock will withdrawn enter password automatically).

Password can be set up total 8 groups, that is, 1 group master password, 5 groups door password, 2 groups management password. The maximum number of cards can set up 10 pcs, they are 1 master card, 2 management card, 7 room cards .

Note: when entering password, only press # , then can touch valid cards .

When you press the password, you can only rely on the card after you press the "#" sign.

Programming

1. **Initialization:** Press the reset button to initialize the system, the master password is "123456".

When clear the stored information in lock, the buzzer have 3 beeps (but can't delete master card and master password .)

2. **Change master password and master card**

(2.1) To change the management password: - *8# - Enter master password or master card - # - enter new master password - # - enter new master password again . (the program system will withdraw automatically when finish program)

(2.2) Replacing Master Card: "*8#" Enter master code or master card - # - touch new card want to program (this card will replace the old master card) (the program system will withdraw automatically when finish program)

3. **Add room card and room password**

(3.1) Adding room password: - *5# - Enter master password or master card - # - enter room password - # - enter room password again - # - , when blue light on , means add room password success , when red and blue light flash alternately , can enter new room password

(3.2) Adding room card: - *5# - enter master password or master card - # - touch new room card till blue light flash means program success ,can touch new room card one by one .

Note: The length of the password requirements for 4 - 10 digits, room password and room card allow 5 groups at most .

4. **Change room password**

- *6# - enter master password or master card - # - enter old room password - # - red and blue light flash alternately, enter new room password - # - enter new password - # - , when change program process finish the system will withdraw automatically .

Note: After changing the room password, the new room password becomes the current valid room password.

5. **Delete room card and password**

(5.1) Delete password: - *7# - enter master password or master card - # - enter room password - # - , can delete all the room passwords one by one .

Note: The master password cannot be deleted.

(5.2) Deleting room Card: - *7# - enter master password or master card , enter card serial number - # - enter room password - # - , can delete all the room cards one by one .

Note: when add room cards must register the card ID and card serial number , the card serial number between 1 - 800 . For example delete card number 2 operation like this : - *7# - enter master password or master card - 02 - # -

6. **Delete Lock Inside Data**

(6.1) - *0# - Enter master password or master card - # - 00 - # - , delete lock unlock records
(only keep the records unlock by master card and master password)

(6.2) - *0# - Enter master password or master card - # - 01 - # - , delete all valid room passwords
(only keep the master card and master password information)

(6.3) - *0# - Enter master password or master card - # - 02 - # - , delete all valid room cards
(only keep the master card and master password information)

7. **Program unlock mode (default mode 1)**

(7.1) - *1# - enter master password or master card - # - 11 - # - , stand alone model : the valid room card or valid

password can unlock the locker .

- (7.2) - *2# - Enter master password or master card - # - 22 - # - , combination mode : valid card + valid password to open the door, card and password in no particular order.
- (7.3) - *3# -Enter master password or master card- # -33-#-, public mode : The card and password are both available for public functions, and in this mode, if the door is locked by password, the card will can't unlock the locker, only password can .

8. Program management card

- (8.1) Adding management card: -*9#- enter master password or master card -#- , can program 2 management card contiguous
- (8.2) Adding management password: -*9#- enter master password or master card -#- enter management password-#-enter management password again -#-, blue light flash to notice program success (can program 2 groups management password total) .In combination mode,management card and management password both can unlock locker . In Public mode, after management card or management password unlock locker , can program new password or new card , the old management password and card will be delete then .