

H1 User's Manuel

I. Configuration Master Card.

Push the setting button on the back of the lock body, the buzzer will sound once with light flashing, touch the EM card one the contact area of lock, then buzzer will have one sound, the light turn off, this card will be master card.

Note: 1. Once the new master card has been configured successfully, all before configured master cards, guest cards and service cards will be deleted at the same time.

ii. Configuration Guest Cards.

Touch the master card once, the buzzer will sound once, and the light will start flashing at the same time, touch the card need to be configured, the buzzer will ring once, the light will turn off, and the card be successfully configured as a guest card. Only one guest card allows to program per lock.

iii. configuration of service cards.

Each lock allows to configure 10 pcs service cards, the configuration process is as follows: touch the master card 2 times in succession (that is, touch the first management card after the light blinks during the period of time to touch the master card again), the light continues to blink, remove the master card, touch the card want to be configured as service card, then the buzzer sounded, the card is successfully configured as service card. While the light is still flashing, can continue to touch other cards want to configure, dispensing multiple service cards. When the buzzer gives a long sound, the light

stops flashing and the configuration process ends.

IV. Configuring the pass-through card (manager card).

Only one manager card per lock can be configured, whichever is the latest. The configuration process is as follows: effective touch master card 5 times in a row, the light continues to flash, at this time touch once of the configuring card, the buzzer sound and the light turn off, the card is successfully configured as manager card.

Note: 1. Manager card can open door separately in both single and dual card modes;

2. Manager card can be used as an area card to facilitate subdivision management.

3. Manager can open all cabinet locks so the keeper should keep them safe.

I I. Deletion of cards.

I. Delete guest cards and service cards.

Touch the master card effectively 3 times in a row, the light blinks and wait about 2 seconds, the light stays on (not blinking!) After about 10 seconds with one beep and the light will go out, and all the guest cards and service cards originally configured will be deleted (Note that if there are multiple service cards, all service cards will be deleted together! If touch the master card during the 10 seconds that the light is on, the deletion process is canceled.

II. Deletion of the manager card.

Touch the master card effectively 6 times in a row, the light blinks,

remove the master card, wait about 2 seconds, the light stays on (not blinking!) The card is deleted after entering the deletion process, about 10 seconds, the bell rings, the light goes out, at this time the original configuration of the open card is deleted. If you touch the master card during the 10 seconds that the light is on, the deletion process is canceled.

III. Delete the master card.

Press the set button on the back of the lock body until hear a beep and the light starts flashing, touch a new card be program as mater card, while the original master card and other card information will be deleted. No card information is set and deleted without touch any new card during the light flash.

III Master card function

Valid touch master card times	Functions
Once	Program guest card
Twice	Program service card
Four times	Program manager card
Five times	Delete guest card and service card
Six times	Delete manager card